## V-TUF SPRAYEX HDC ASSEMBLY & OPERATING INSTRUCTIONS



## Set up:

- 1. Take connecting pipe (2) out the main container (14) and connect the plastic elbow as seen in (2) into the cap (3) of the fresh detergent tank.
- 2. Connect the metal coupling on the other end of the hose (2) to the metal connection at the point (1) by pulling back the collar of the metal coupling.
- 3. Connect the suction hose (10) end (a) to the main connection (a) on the main tank of the machine.
- 4. Connect the coupling (b) on suction hose (10) to the detergent outlet connection (b) on the machine head (7)
- 5. Chose if you would like to use either the upholstery tool with on/off trigger (11) or the carpet/hard surface cleaning poles and head with on/off trigger (13).
- 6. Connect (c) to (c) and (d) to (d).
- 7. Please remember if you are using carpet/hard surface cleaning poles and head (13), you must connect flexible tube (f) to (f) on the on/off trigger.
- 8. If you are cleaning carpets, please remove the hard surface cleaner squeegee (16) from carpet head (15)
- 9. Please make sure that filter (12) is in position as shown by arrow (6)
- 10. Put your clean low foam carpet/ upholstery cleaner detergent mix into the tank filler shown by arrow (3).
- 11. Plug your machine into the correct mains electric supply.
- 12. Switch on detergent switch (8) (you will hear a buzzing noise) and pull the figure trigger on (11) or (13) to check if the spray of detergent sprays evenly out the spray nozzle.
- 13. Then switch on the vacuum switch (9) and you are ready to work.
- 14. Your can spray and extract at the same time or do one or the other. Just use your discretion.
- 15. Your will notice that the waste tank (14) will start filling up with the extracted water.
- 16. When you have completed the job loosen the two tank clips (4) and tip the excess water down the drain. Empty any leftover detergent from detergent tank (3) and rinse out with clean water. Also run clean water through the detergent pump.
- 17. Never rinse the main head (1) of the machine in any other position than as shown.
- 18. Tank (14) can be rinsed & cleaned by tipping it in any direction.