




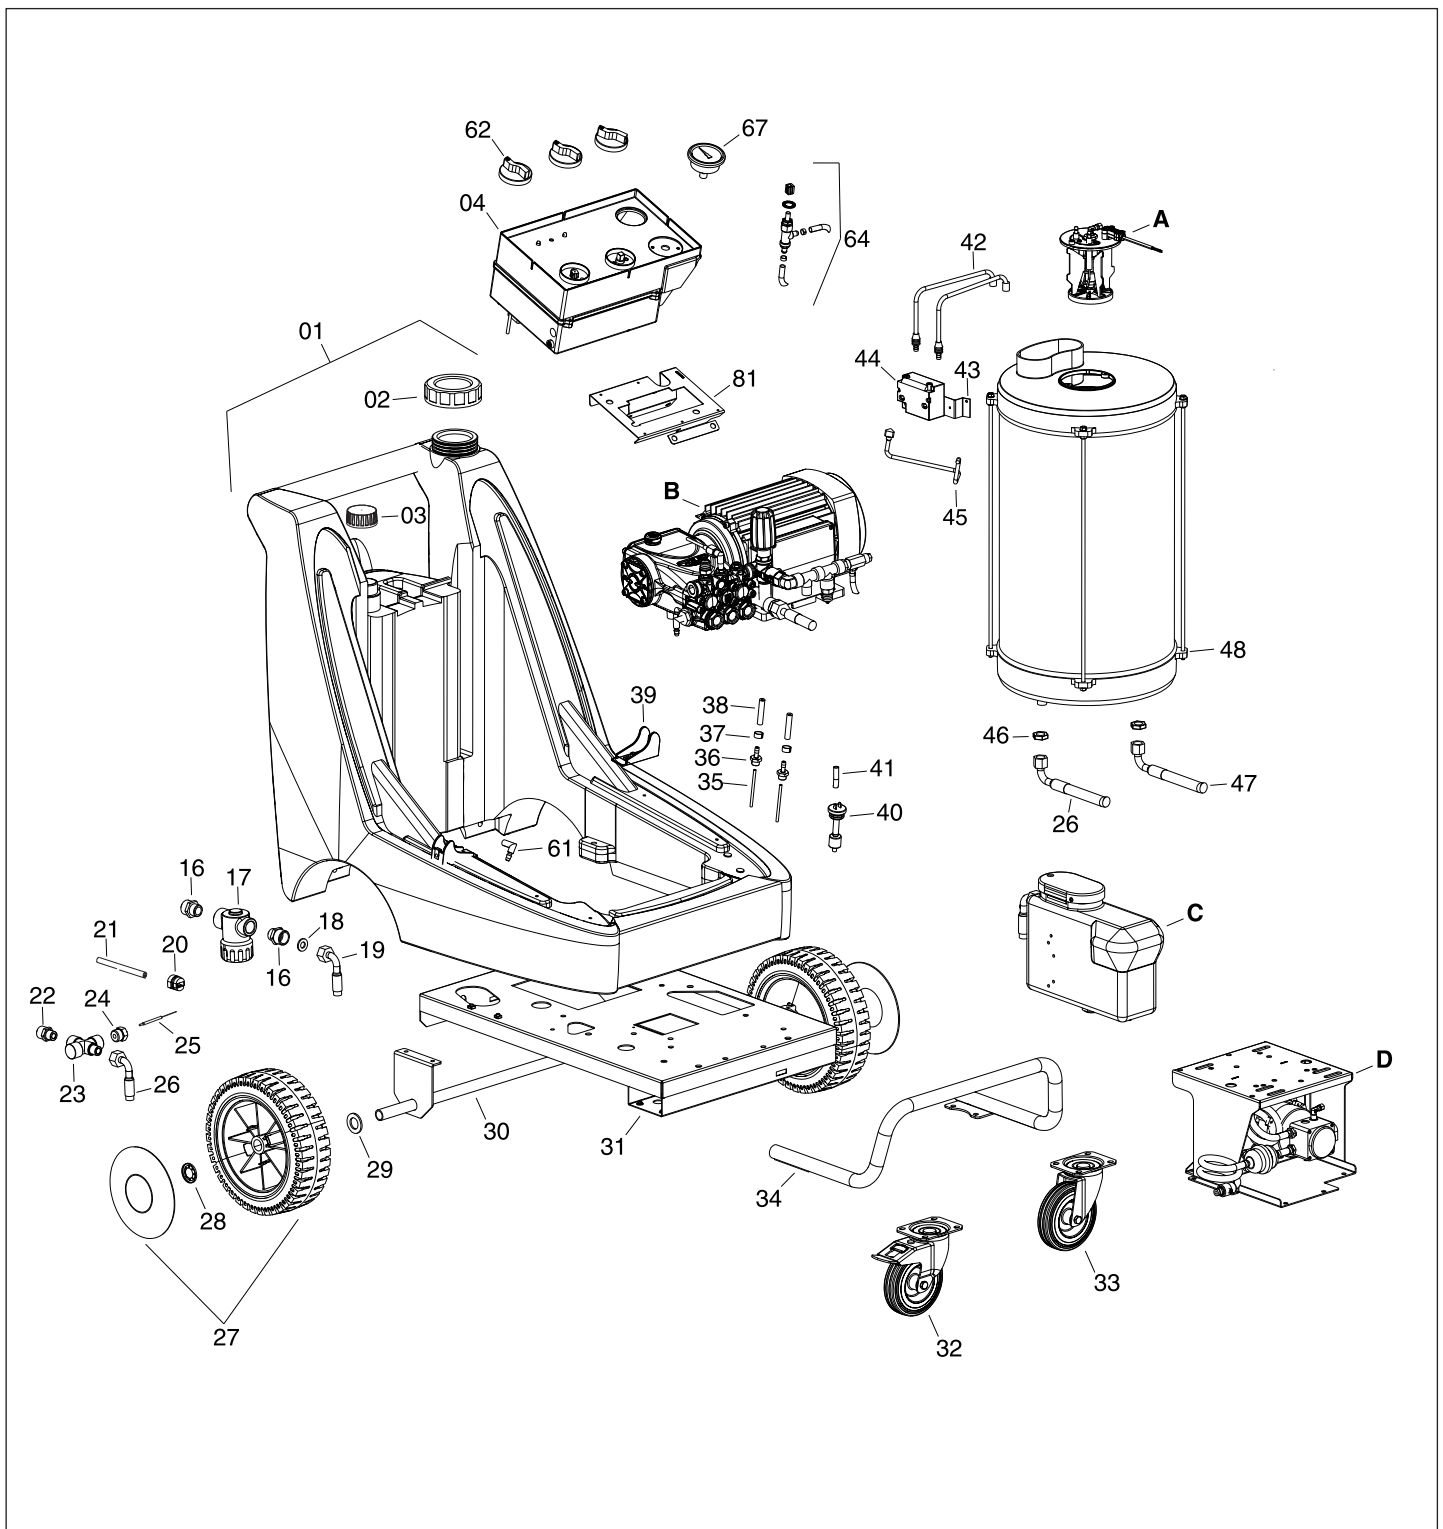


RapidVTX

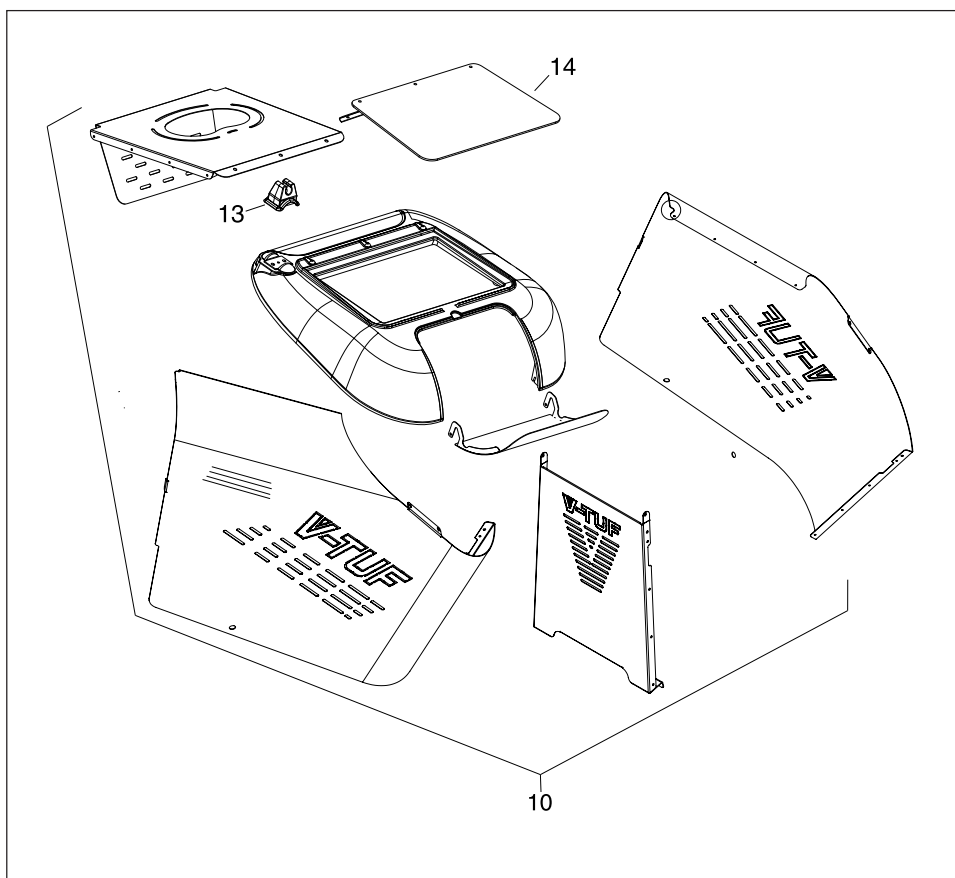


49

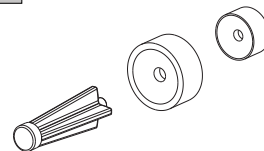






A

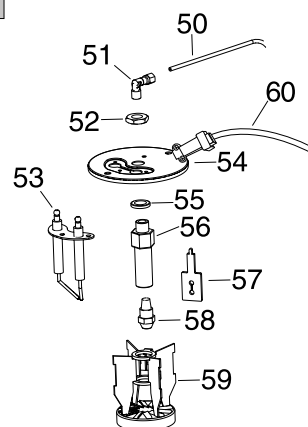

B

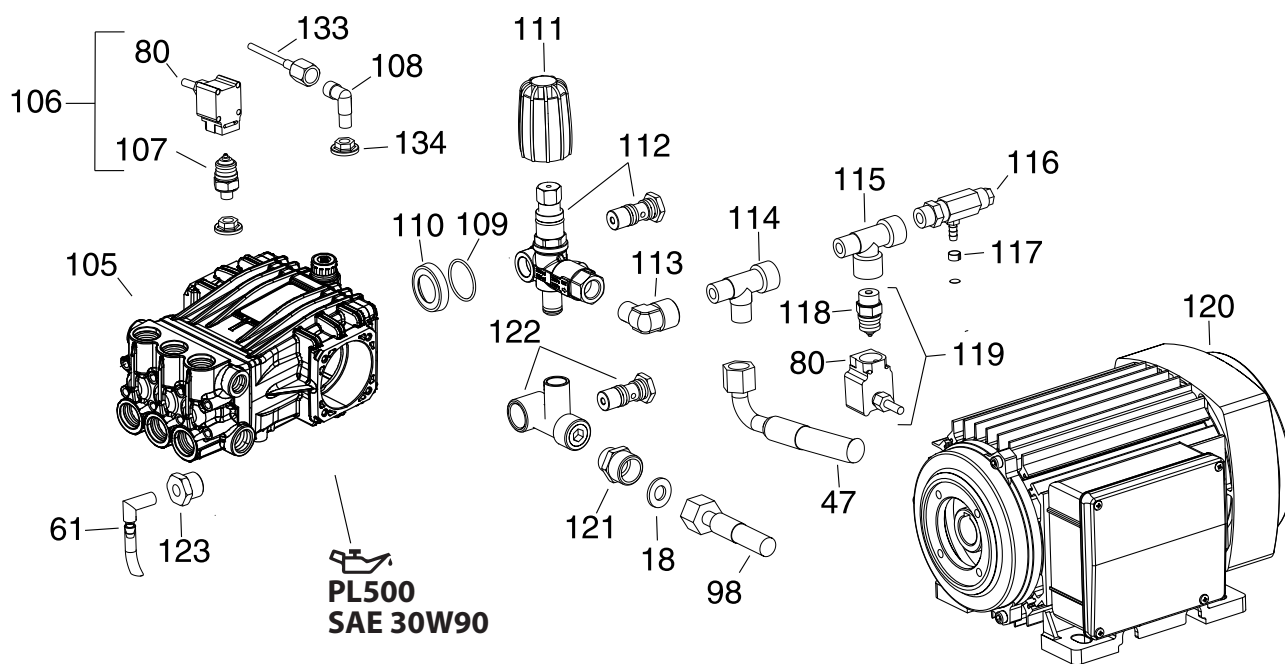


RapidVTX

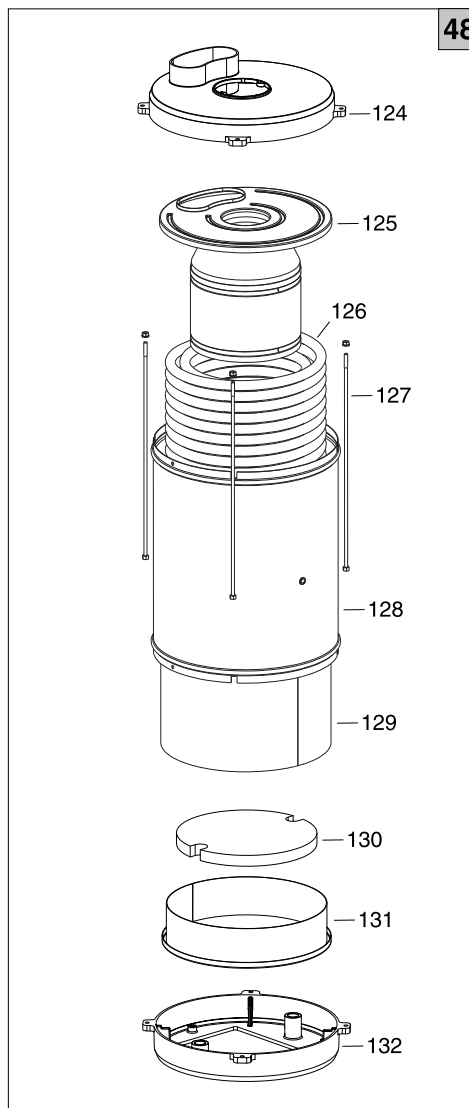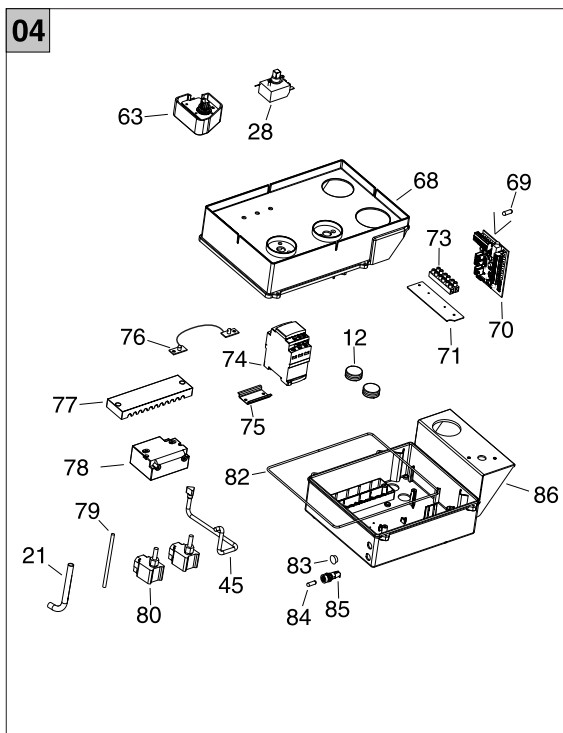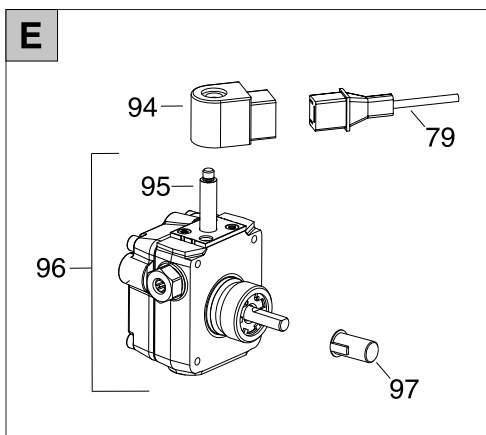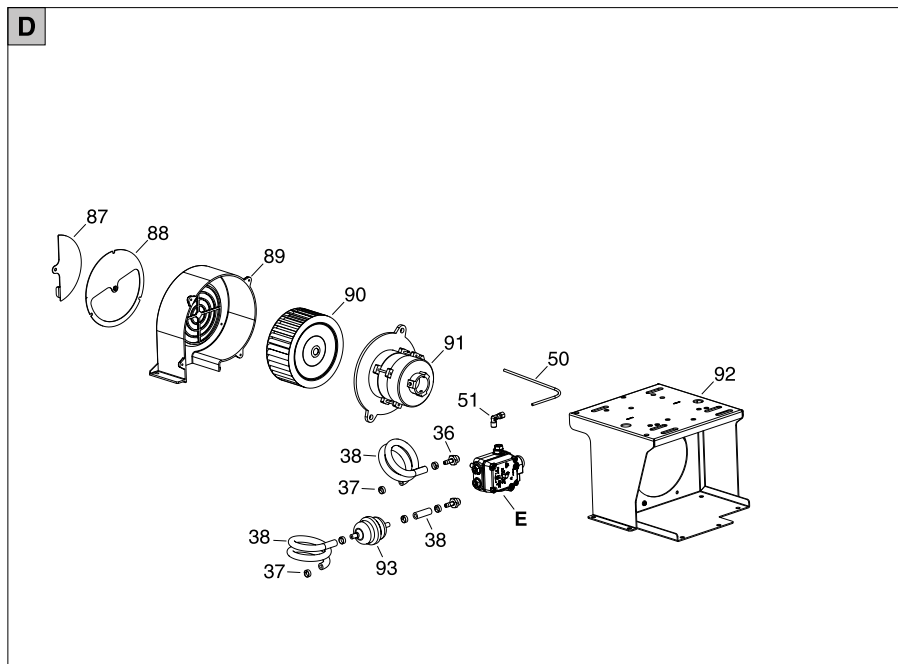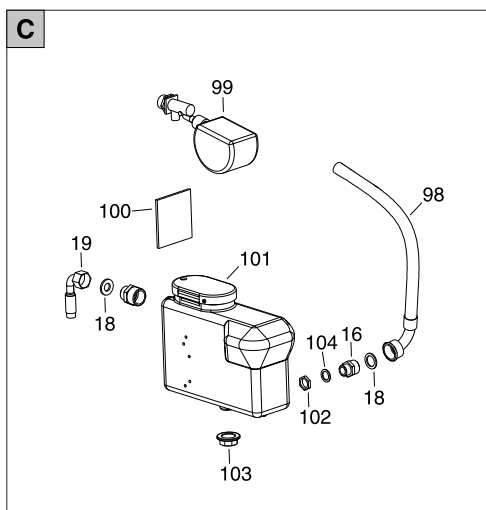

Super Series Pump XHDM300SS

12 litres/min 200 bar

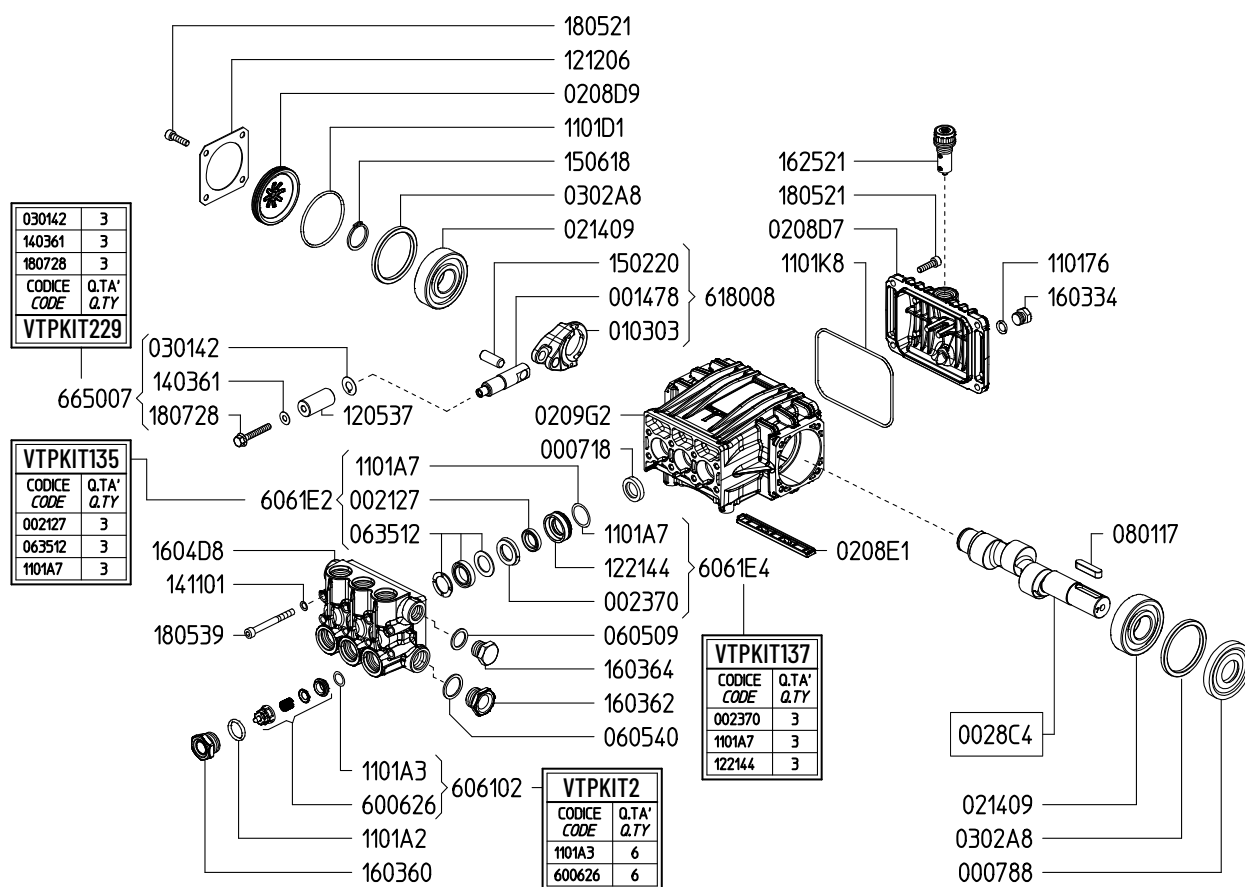

LUBRICATION OF THE PUMP

We recommend:

VTUF PL100 - OIL CAPACITY 0.42 kg

You should change the oil after the first 50 hours of use, and after each subsequent 500 hours of operation.

RapidVTX

Pos.	Codes	Description
1	VTRP1010	Fuel tank for RapidVTX
2	VTRP1011	Fuel Tank cap for RapidVTX
3	VTRP1012	Chemical Tank cap for RapidVTX
4	VTRP1013	Electric iDPS control box panel KIT for RapidVTX
10	VTRP1019	Top Cover Kit for RapidVTX
13	VTRP1022	Rubber Lance Holder Support Bracket for RapidVTX
14	VTRP1023	Replacement PVC Control Panel Flap for RapidVTX
16	MB8/MB12/NP	BSP ADAPTOR - 1/2"M x 3/4"M BRASS NICKLE PLATED BRASS
17	P13.6511	V-TUF INLINE SUCTION FILTER 1/2M x F BLACK PLASTIC - P13.6511
18	VTRP1027	Low-Pressure Water Seal for RapidVTX
19	VTRP1028	Low-Pressure Water Hose for RapidVTX
20	VTRP1029	V-TUF Cable gland 8mm
21	I3.325YEL-6M	CABLE 3 CORE V-TUF PVC 2.5 YELLOW (per meter) - I3.325YEL-6M
22	VTRP1031	Outlet Fitting For RapidVTX
23	VTRP1032	Thermostat sump for RapidVTX
24	VTRP1033	Brass adapter for RapidVTX
25	VTRP1034	Thermostat for RapidVTX
26	VTRP1035	High-Pressure hose from burner to outlet for RapidVTX
27	WHEEL10HP	10" Wheel & hubcap for RapidVTX
28	VTRP1037	Elastic washer for RapidVTX
29	VTRP1038	Inside Washer For WHEEL10HP for RapidVTX
30	VTRP1039	Wheel axle for RapidVTX
31	VTRP1040	Pressure washer Chassis Base for RapidVTX
32	VTRP1041	Castor wheel with break for RapidVTX
33	VTRP1042	Castor wheel without break for RapidVTX
34	VTRP1043	Stainless steel bumper for RapidVTX
35	VTRP1044	Fuel pipe, from the tank for RapidVTX
36	VTRP1045	Fuel pipe hose connection for RapidVTX
37	VTRP1046	Clip for fuel hose for RapidVTX
38	VTRP1047	Flex diesel pipe for RapidVTX
39	VTRP1048	Stirrup cover holder bracket for RapidVTX
40	VTRP1049	Fuel Level sensor for RapidVTX
41	I10.1605C	Fuel Level sensor cable for RapidVTX
42	VTRP1051	H.T. Cable connect for RapidVTX
43	VTRP1052	Transformer support bracket for RapidVTX
44	VTRP1053	H.T. Transformer for RapidVTX
45	VTRP1054	Pressure switch cable for RapidVTX

RapidVTX

Pos.	Codes	Description
46	VTRP1055	Lock nut for burner hoses for RapidVTX
47	VTRP1056	High-pressure hose from the pump to the boiler for RapidVTX
48	VTRP1057	Boiler for RapidVTX
49	VTRP1058	Wheel kit for RapidVTX
50 & 51	VTRP1059	Metal diesel pipe with fittings for RapidVTX
52	VTRP1061	Nut for RapidVTX
53	VTRP1062	Ignition electrodes assembly for RapidVTX
54	VTRP1063	Burner support disc for RapidVTX
55	VTRP1064	Washer RapidVTX
56	VTRP1065	Fuel Nozzle holder RapidVTX
57	VTRP1066	Stirrup RapidVTX
58	VTRP1067	Fuel Nozzle RapidVTX
59	VTRP1068	Turbulence-generating grid RapidVTX
60	VTRP1060	Flame control sensor for RapidVTX
61	VTRP1069	Fitting for pressure gauge pipe RapidVTX
62	VTRP1070	Yellow plastic control knob RapidVTX
63	VTRP1071	On/off switch RapidVTX
64	VTRP1072	Detergent valve kit RapidVTX
67	VTRP1075	Pressure gauge for RapidVTX
68	VTRP1076	El. control box top panel for RapidVTX
69	VTRP1077	Fuse for PCB control board for RapidVTX
70	VTRP1078	PCB for RapidVTX
71	VTRP1079	PCB board holder for RapidVTX
72	VTRP1080	Cable fastener for RapidVTX
73	VTRP1081	Terminal board for RapidVTX
74	VTRP1082	Contactor for RapidVTX
75	VTRP1083	Support bracket for contactor for RapidVTX
76	VTRP1084	PCB for RapidVTX
77	VTRP1085	Cover for RapidVTX
78	VTRP1086	Autotransformer for RapidVTX
79	VTRP1087	H.T. Cable connect for RapidVTX
80	VTRP1088	Pressure switch - Electrical assembly for RapidVTX
81	VTRP1089	Motor Support bracket for iDPS control box RapidVTX
82	VTRP1090	Seal for RapidVTX
83	VTRP1091	Cap for RapidVTX
84	VTRP1092	Fuse for control box for RapidVTX
85	VTRP1093	Fuse holder for RapidVTX

RapidVTX

Pos.	Codes	Description
86	VTRP1094	El. control box panel brace for RapidVTX
87	VTRP1095	Air adjustment shutter for RapidVTX
88	VTRP1096	Support bracket for RapidVTX
89	VTRP1097	Burner fan deflector for RapidVTX
90	VTRP1098	Burner Fan for RapidVTX
91	VTRP1099	Burner Motor for RapidVTX
92	VTRP1100	Burner Motor flange for RapidVTX
93	E3.601	FF60 FUEL INLINE FILTER WITH PAPER ELEMENT - E3.601
94	D1.020-24	SOLENOID COIL 24 Volt for Danfoss Fuel Pump - D1.020-24
95	VTRP293	Solenoid valve body
96	D1.025-24	FUEL PUMP DANFOSS - BFP21R3 24 VOLT / 8mm - Right rotation - D1.025-24
97	VTRP1105	V-TUF Drive Peg For RapidVTX
98	VTRP1106	Low Pressure Pipe for HPC tank for RapidVTX
99	VTRP1107	Float valve for RapidVTX
100	VTRP1108	Bulkhead for RapidVTX
101	VTRP1109	Water tank for RapidVTX
102	VTRP1110	Nut for RapidVTX
103	VTRP1111	Nut for RapidVTX
104	VTRP1112	Seal for RapidVTX
105	XHDM300SS	High pressure pump
106	VTRP1114	Pressure switch assembly for RapidVTX
107	VTRP1115	Pressure switch - Hydraulic assembly for RapidVTX
108	VTRP1116	Fitting for RapidVTX
109	VTRP1117	O-ring for RapidVTX
110	VTRP1118	Fitting for RapidVTX
111	C0.099	Yellow Unloader plastic knob
112 & 122	C0.195	Unloader Valve assembly
113	VTRP1121	Elbow for unloader for RapidVTX
114	VTRP1122	T Fitting for RapidVTX
115	VTRP1123	Pressure switch fitting for RapidVTX
116	VTRP1124	Safety valve for RapidVTX
117	VTRP1125	Clip for RapidVTX
118	VTRP1126	Pressure switch - Hydraulic assembly for RapidVTX
119	VTRP1127	Pressure switch for RapidVTX
120	MH.243-O1	2.5kw Motor for RapidVTX
121	VTRP1129	Fitting for RapidVTX
123	VTRP1131	Pump Pressure gauge fitting for RapidVTX

RapidVTX

Pos.	Codes	Description
124	VTRP1132	Top boiler cover for RapidVTX
125	VTRP1133	2nd Boiler cover for RapidVTX
126	VTRP1134	Boiler coil for RapidVTX
127	VTRP1135	Tie rod for RapidVTX
128	VTRP1136	Stainless side casing for boiler for RapidVTX
129	VTRP1137	Internal heat-resistant casing for RapidVTX
130	VTRP1138	Heat mat for boiler for RapidVTX
131	VTRP1139	Boiler base external cover for RapidVTX
132	VTRP1140	Boiler base internal cover for RapidVTX
133	VTRP1141	Micropipe for RapidVTX
134	VTRP1142	Cap for RapidVTX