

V-TUF

VTES08012 THROTTLE CONTROL




1. Kit as ordered

- 1x Cable
- 2x 5mm rivet
- 1x Throttle lever




2. Review of fitted product

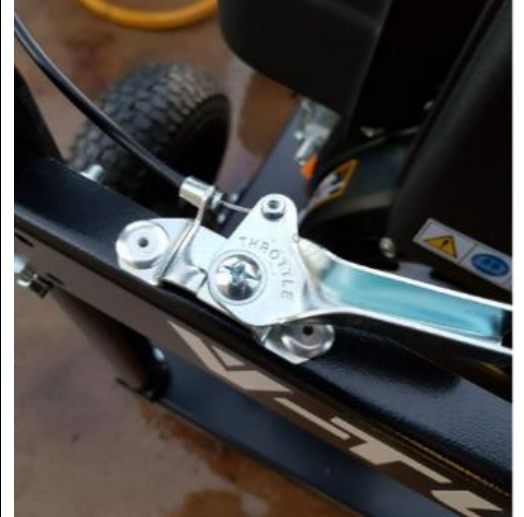

3. Mounting of throttle lever

1. Mark out mounting holes of throttle lever assembly
2. Drill 2x 5mm holes
3. Rivet the lever in place as shown

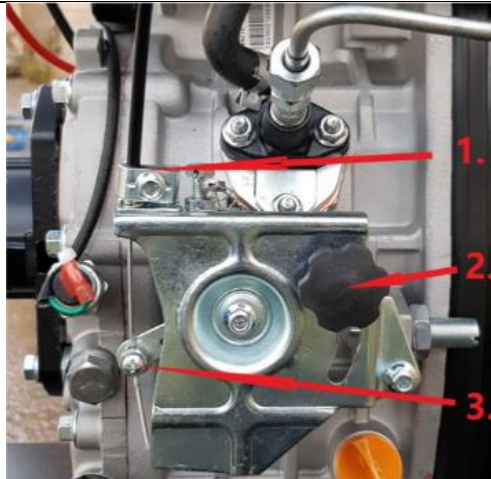


4. Connection of cable.

1. Secure outer cable sleeve at this point.
2. Make sure this is NOT tight
3. Secure cable end



5. Trim cable and cable sleeve as needed and fit cable through small hole and secure with anchor screw.

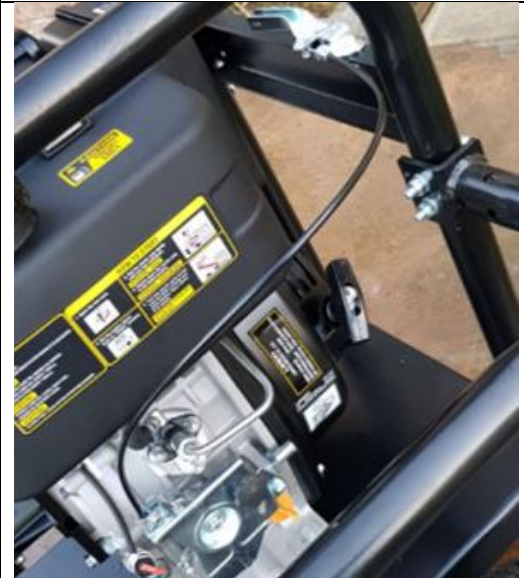

6. Fitted product

For any assistance, please see video on

<https://www.v-tuf.co.uk/spares-accessories/pressure-washer-accessories/engines-motors/engine-spares-accessories/throttle-control-handle-cable-assembly-vtes08012?code=VTES08012>